

## **APPENDIX JJ**

### **VESSEL SUSTAINING CODES (VOYAGE ITINERARY POINT SELF SUSTAINABILITY CODE)**

#### **A. GENERAL**

The vessel sustaining code indicates the physical capability of the ship's gear to discharge the cargo on board regardless of the vessel terms of carriage. This code is used only on the ocean manifest header cards. The most current versions of the following codes are available on the TRDM website at <https://trdmws.maf.ustranscom.mil/>—click on “DTR Data” and “DTR Data and Voyage Itinerary Point Self Sustainability Code”, and select “Display Data” from the Action Legends box. They are accessible by all users, to include Department of Defense contractors and vendors, through the Defense Transportation Electronic Business website at <https://www.ustranscom.mil/cmd/associated/dteb/> by clicking on “Reference Data” and “Voyage Itinerary Point Self Sustainability Code”.

**THIS PAGE INTENTIONALLY LEFT BLANK**